



Illustrated Parts List

Model Series

122400

TYPE NUMBERS
0033 through 0230.

TABLE OF CONTENTS

Air Cleaner	6
Blower Housing	7
Camshaft	2
Carburetor	4
Controls	5
Crankcase Cover	2
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	7
Exhaust System	6
Flywheel	7
Fuel Supply	4
Governor Spring	5
Gear Reduction	7
Ignition	5
Kits/Gaskets - Carburetor	4
Kits/Gaskets - Engine	2
Kits/Gaskets - Valve	3
Lubrication	2
Piston Group	2
Rewind Starter	7

PRINTED IN U.S.A.



COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

1319 WARNING LABEL



REQUIRED when replacing parts with warning labels affixed.












1058 OPERATOR'S MANUAL







1330 REPAIR MANUAL

















1019 LABEL KIT

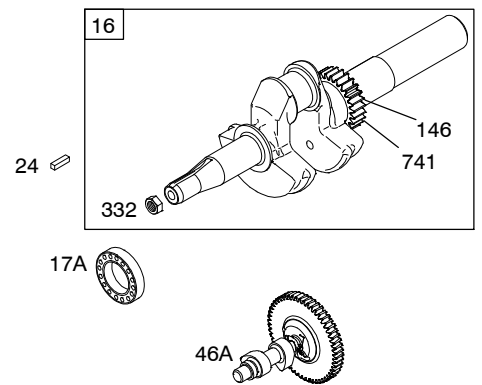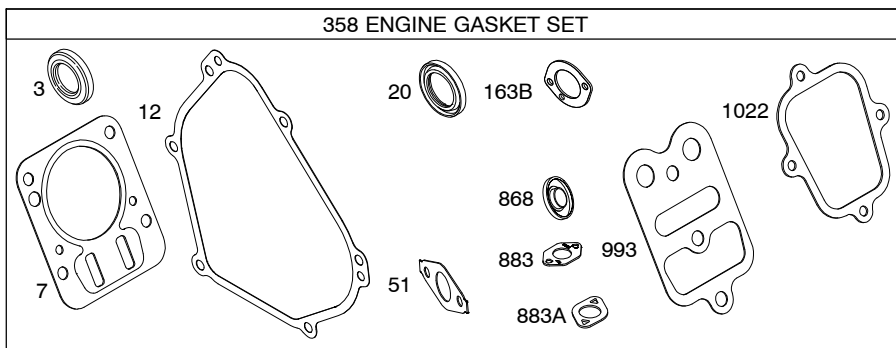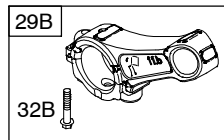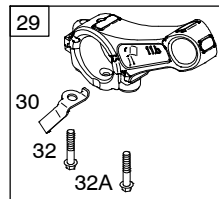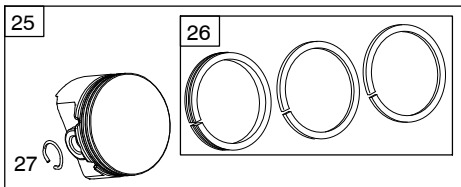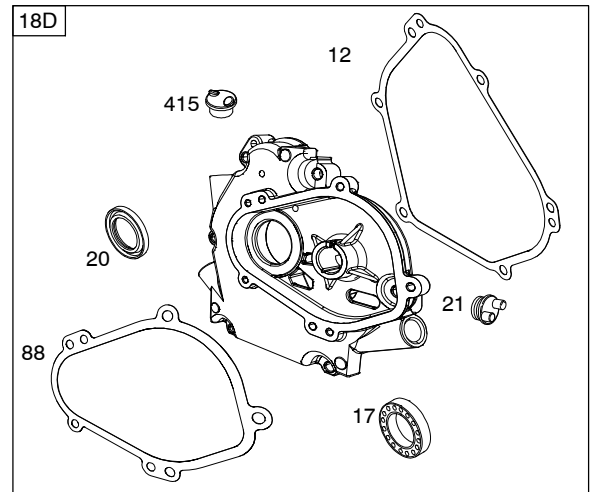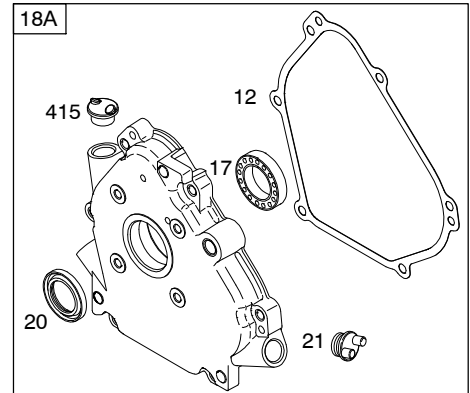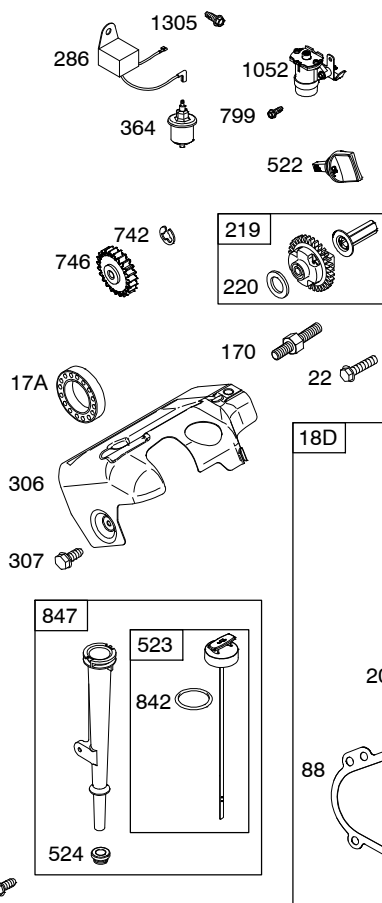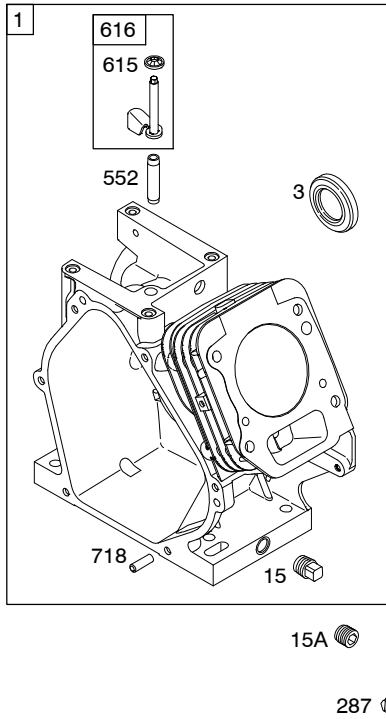

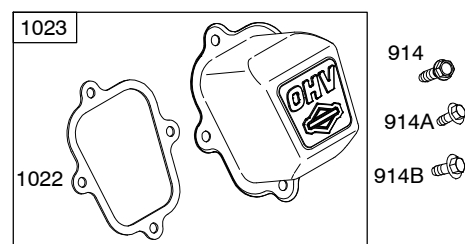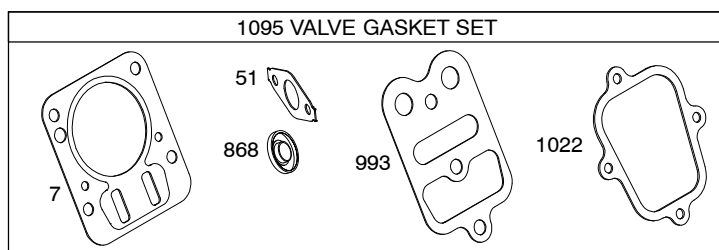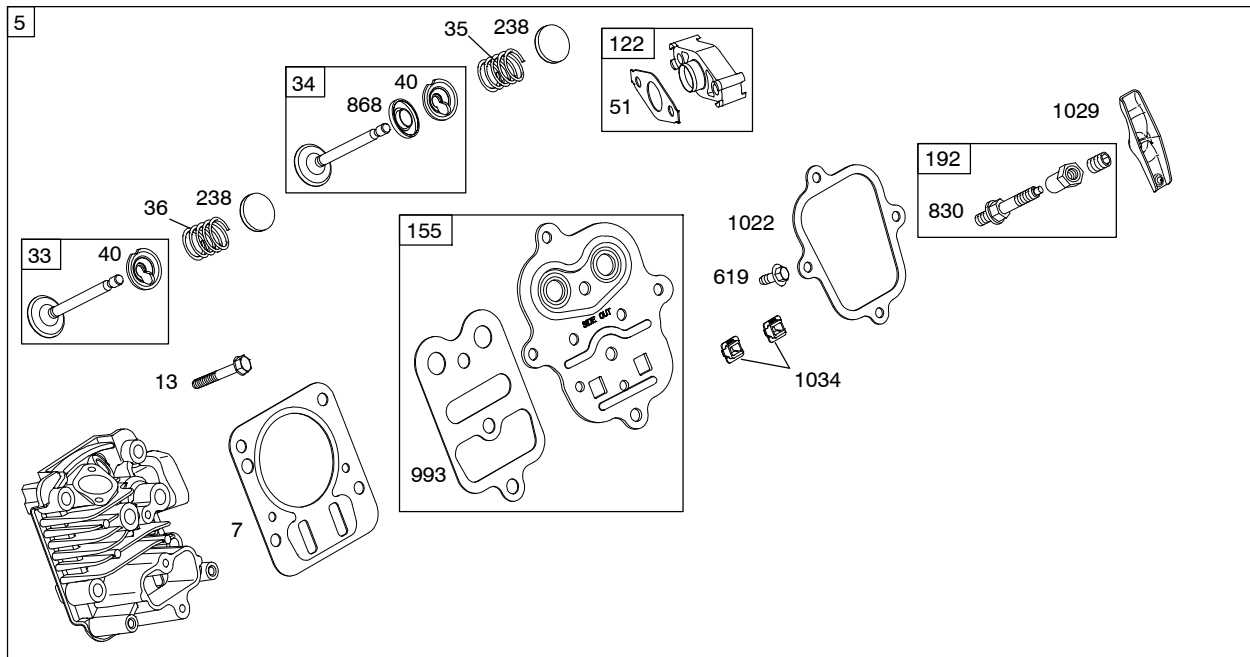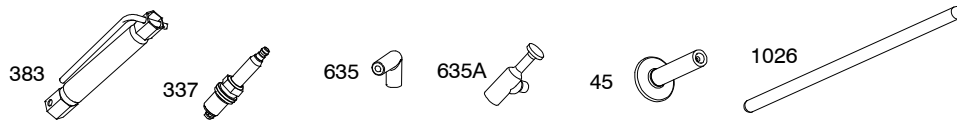


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

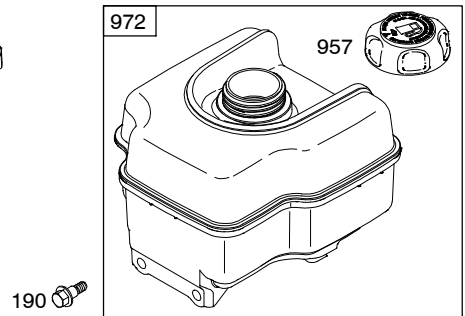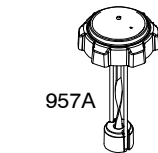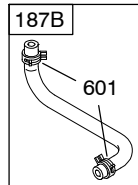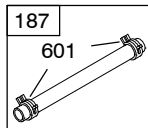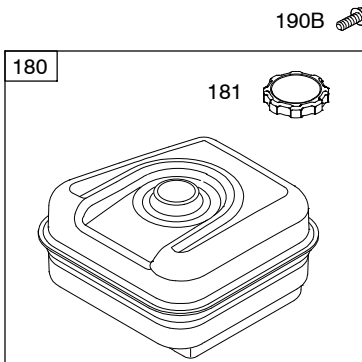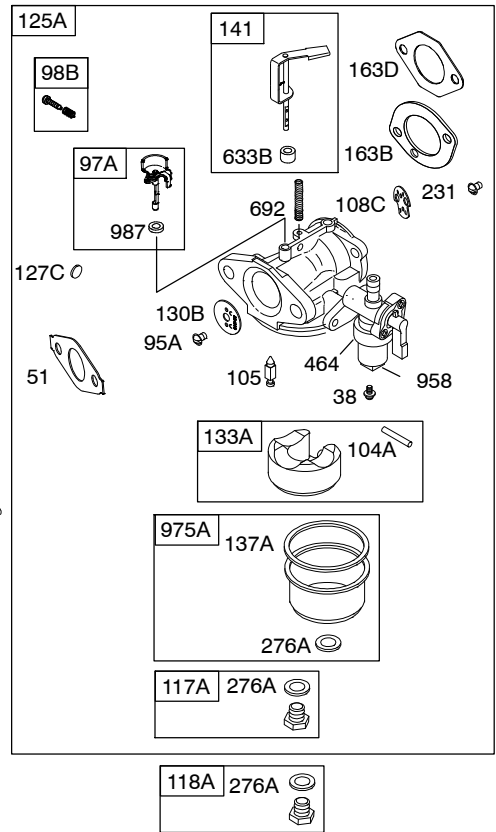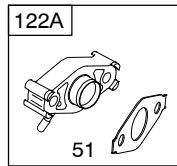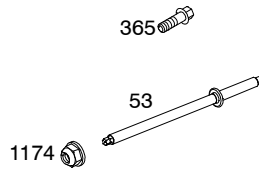
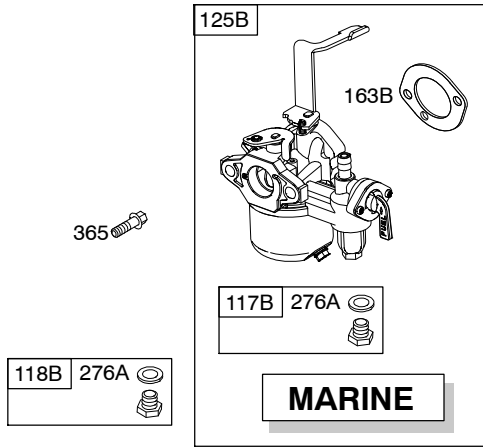
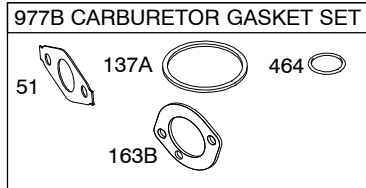
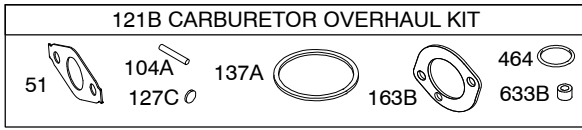


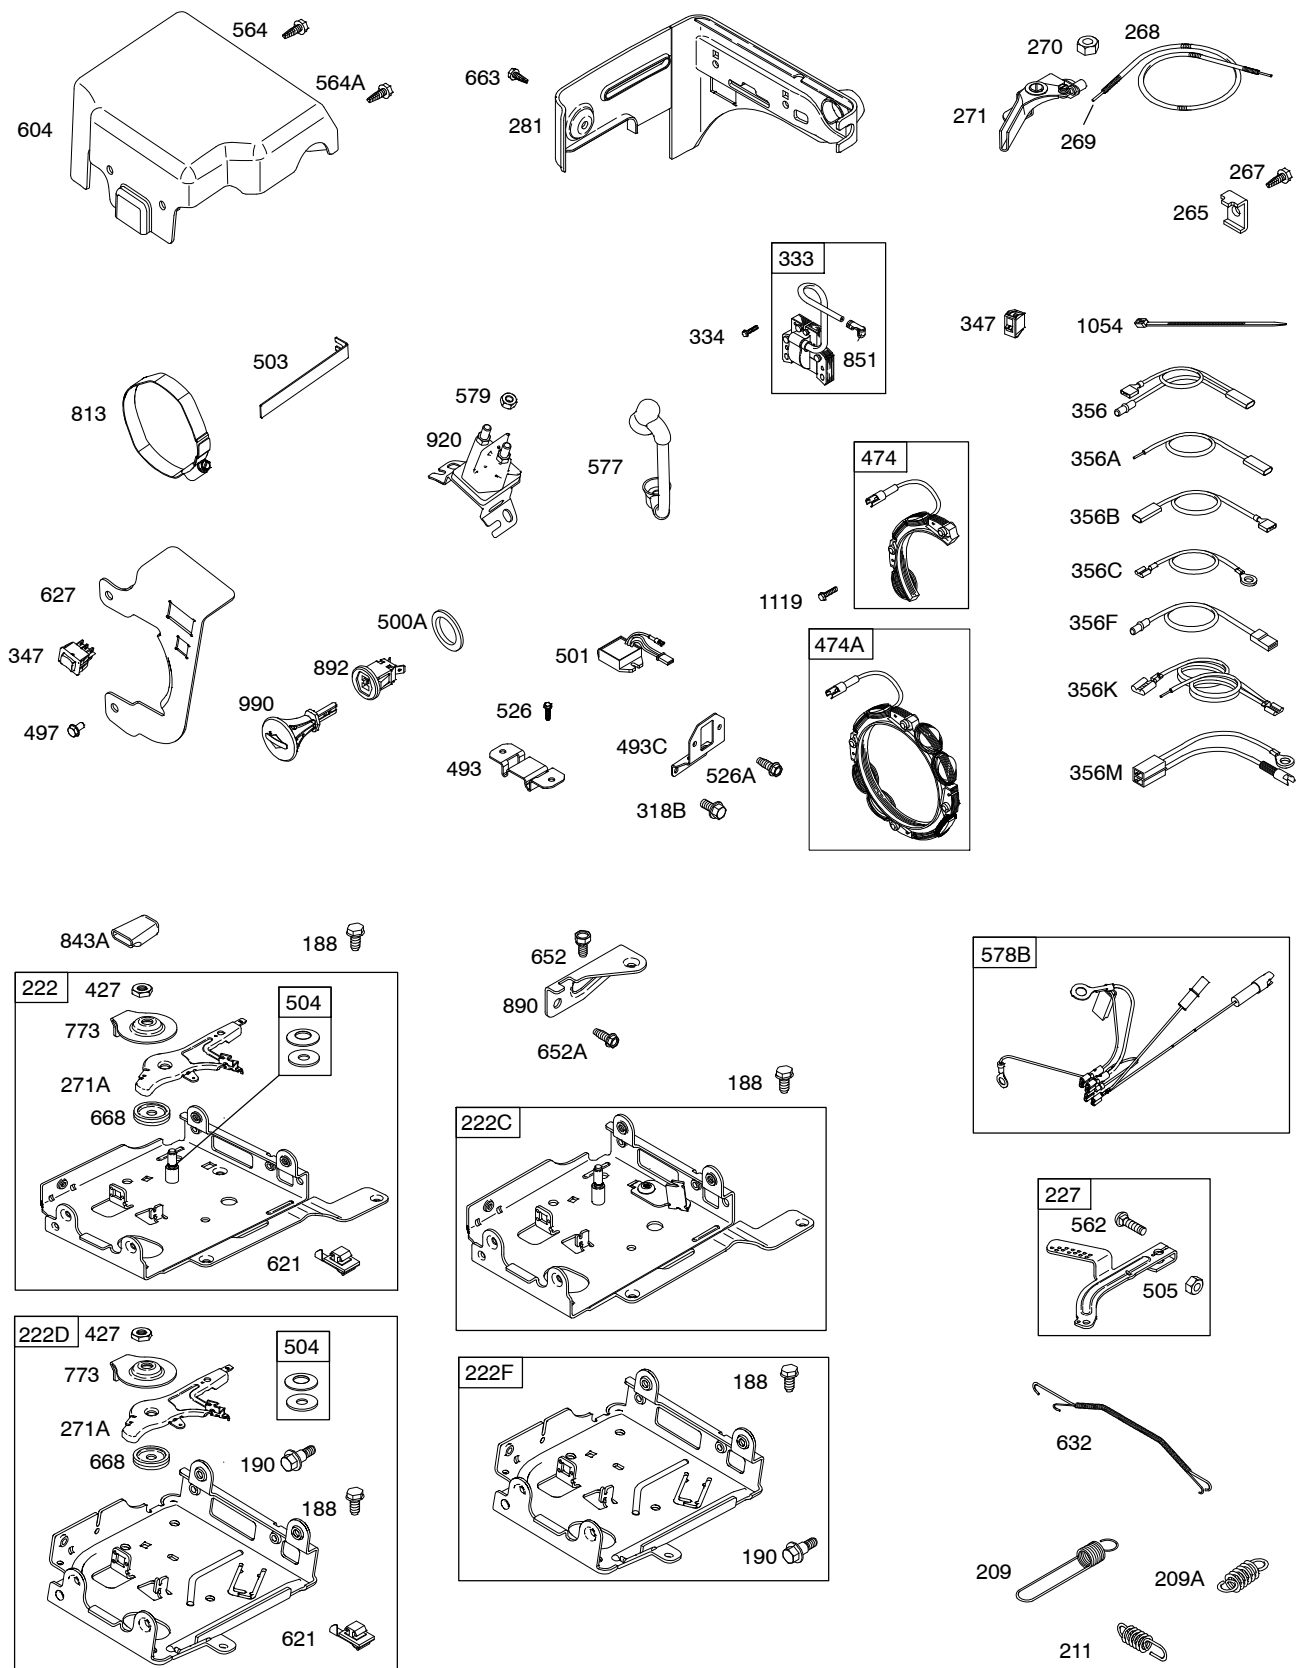



Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

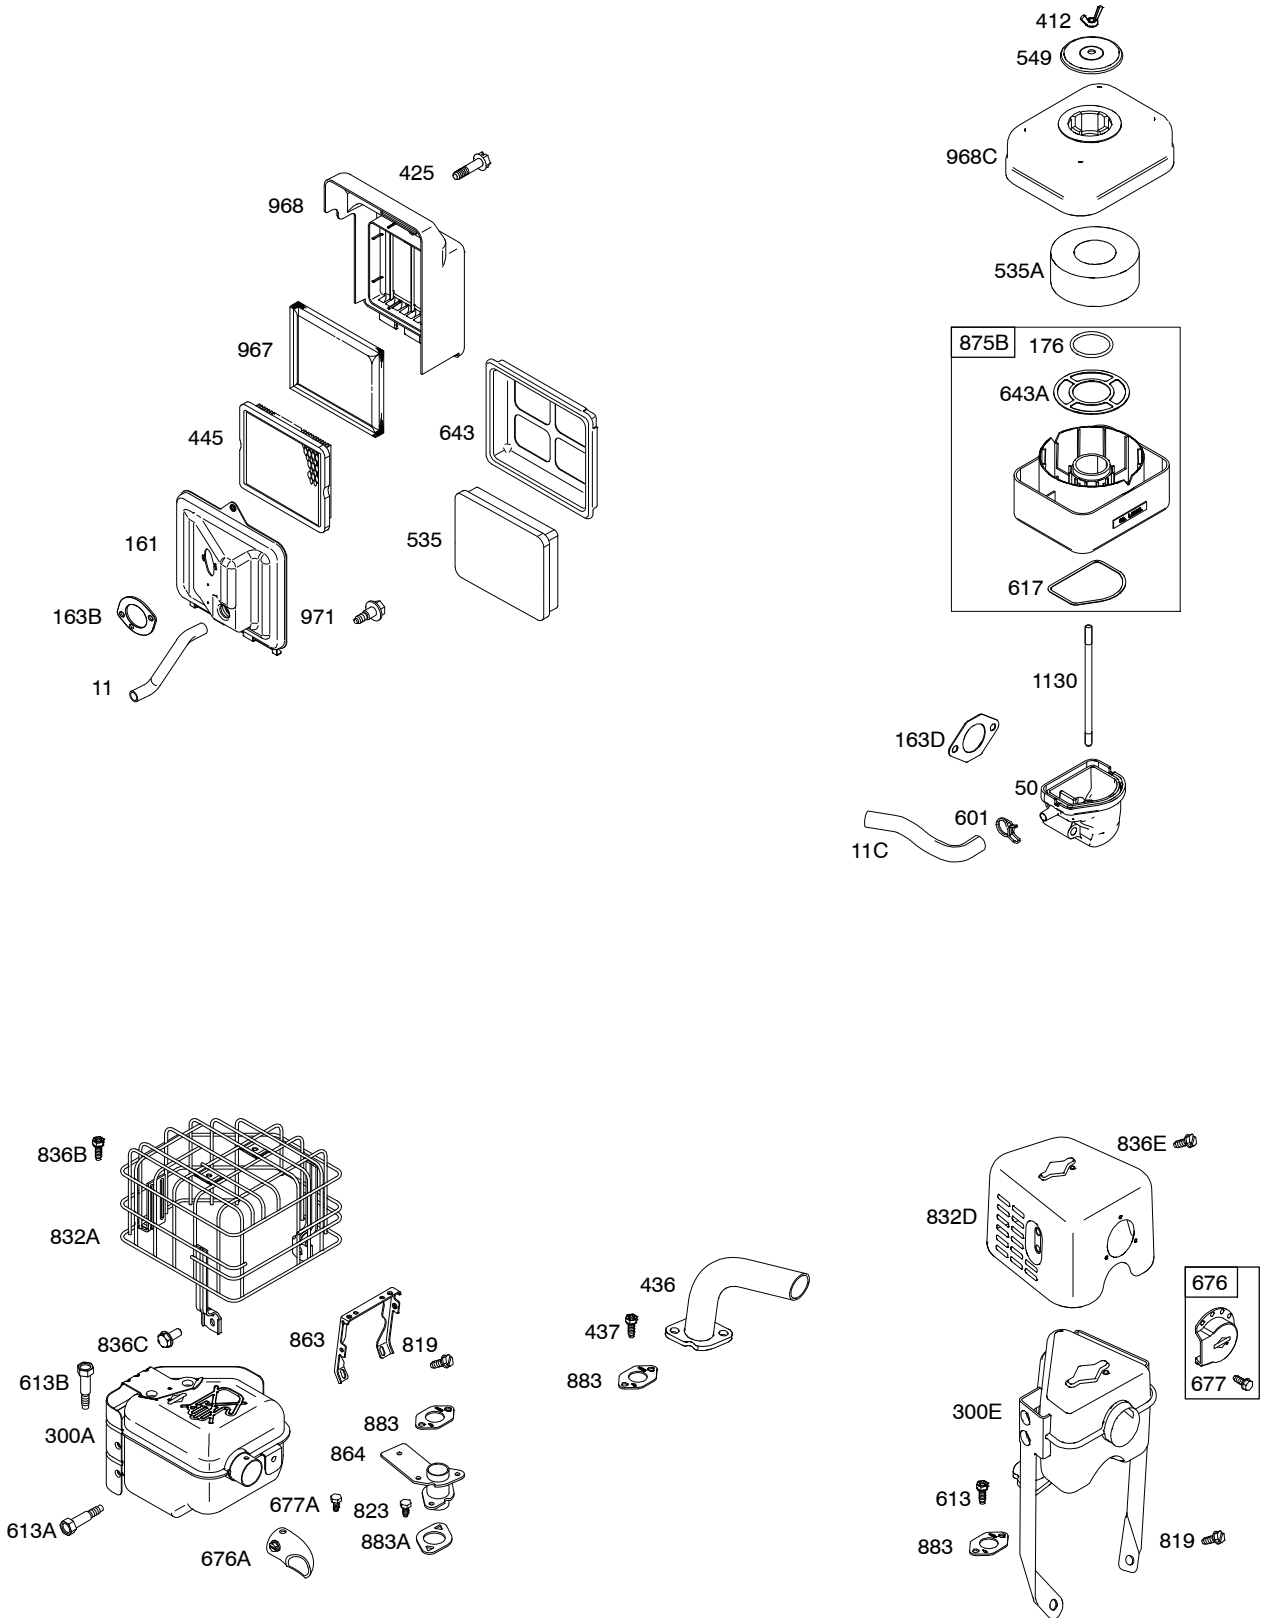


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3379-6 Assemblies include all parts shown in frames. **06/16/2008**

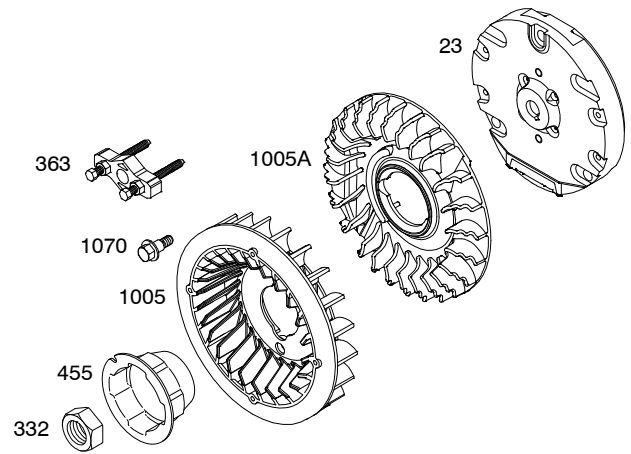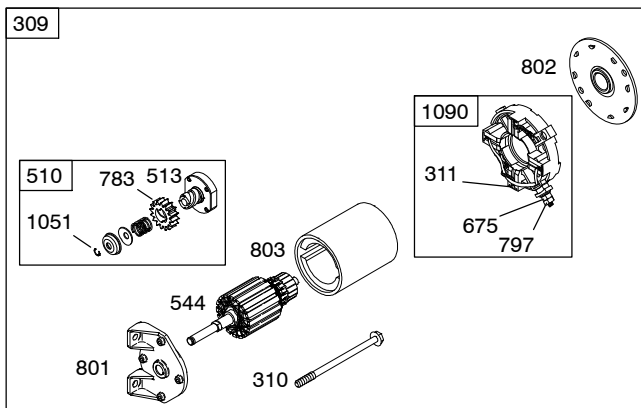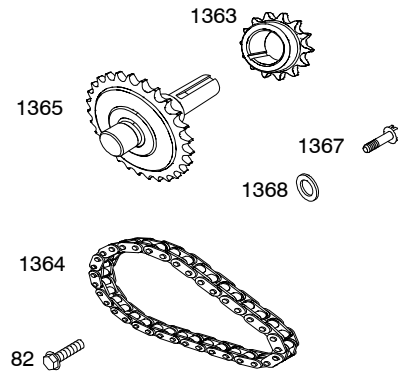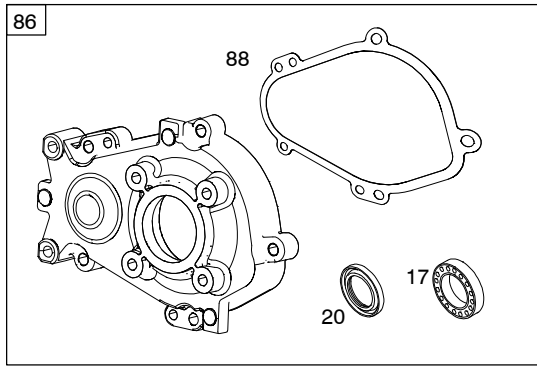

697

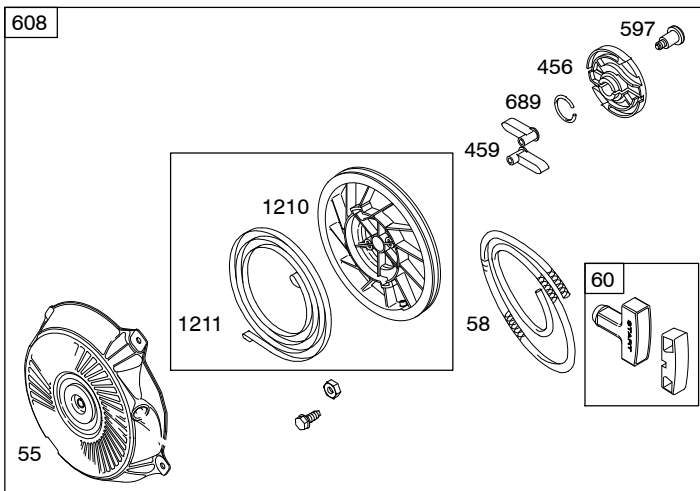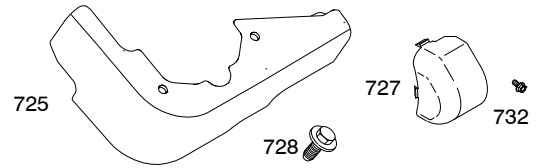

65

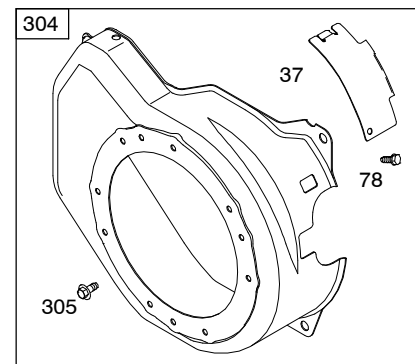

1036 EMISSIONS LABEL

122400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699490	Cylinder Assembly ----- Note ----- 793704 Cylinder-Assembly Used on Type No(s). 0134, 0168.	16	699835	Crankshaft Used on Type No(s). 0112, 0115, 0151, 0156, 0162, 0163, 0169, 0226, 0227, 0228.	17	692517	Bearing-Ball
3	★299819S	Seal-Oil (Magneto Side)			----- Note ----- 699443 Crankshaft Used on Type No(s). 0036, 0100, 0113, 0114, 0124, 0125, 0135, 0136, 0137, 0138, 0139, 0146, 0150, 0157, 0159, 0167, 0168, 0170, 0178, 0180, 0182, 0194, 0196, 0200, 0203, 0210, 0214, 0223, 0224, 0225, 0230.	17A	690824	Bearing-Ball
5	699486	Head-Cylinder			790329 Crankshaft Used on Type No(s). 0111, 0121, 0126, 0130, 0134, 0154, 0181, 0190, 0201, 0229, 0232, 0235.	18A	790337	Cover-Crankcase Used on Type No(s). 0033, 0100, 0110, 0112, 0113, 0114, 0115, 0118, 0119, 0122, 0123, 0124, 0125, 0127, 0128, 0129, 0132, 0135, 0136, 0137, 0138, 0139, 0146, 0151, 0152, 0156, 0157, 0159, 0160, 0162, 0163, 0167, 0169, 0170, 0173, 0174, 0176, 0178, 0180, 0182, 0194, 0195, 0196, 0203, 0205, 0210, 0211, 0214, 0223, 0224, 0225, 0226, 0227, 0228, 0230.
7	★Ø698210	Gasket-Cylinder Head			698879 Crankshaft Used on Type No(s). 0033, 0110, 0118, 0119, 0122, 0123, 0127, 0128, 0129, 0132, 0176, 0187, 0188, 0205, 0211.			----- Note ----- 699672 Cover-Crankcase Used on Type No(s). 0036, 0150, 0187, 0188, 0200.
11	812208	Tube-Breather (Flat Panel Air Cleaner)			699452 Crankshaft Used on Type No(s). 0120.	18D	790330	Cover-Crankcase Used on Type No(s). 0111, 0121, 0126, 0130, 0134, 0154, 0168, 0181, 0190, 0201, 0229, 0232, 0235.
11C	793418	Tube-Breather (Oil Bath Air Cleaner)			793327 Crankshaft Used on Type No(s). 0160, 0173, 0174.			
12	★699485	Gasket-Crankcase			793677 Crankshaft Used on Type No(s). 0195.	20	★692550	Seal-Oil (PTO Side)
13	699482	Screw (Cylinder Head)			699441 Crankshaft Used on Type No(s). 0199.	21	281658S	Cap-Oil Fill
15	691686	Plug-Oil Drain (Square Head)			699451 Crankshaft Used on Type No(s). 0197.	22	699478	Screw (Crankcase Cover/ Sump)
15A	691682	Plug-Oil Drain (Flush)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3379-8

Assemblies include all parts shown in frames.

06/16/2008

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
23	699488	Flywheel ----- Note ----- 699514 Flywheel Used on Type No(s). 0121, 0150, 0154, 0156, 0163, 0190, 0201, 0205, 0228, 0229, 0230, 0232.	30	791584	Dipper-Connecting Rod	58	693389	Rope-Starter (Rewind Starter Parts Used With 3MM Diameter Starter Rope)
24	222698S	Key-Flywheel	32	691664	Screw (Connecting Rod)			----- Note ----- 66574 Rope-Starter (Rewind Starter Parts Used With 5MM Diameter Starter Rope)
25	792004	Piston Assembly (Standard) ----- Note ----- 791325 Piston Assembly (.020" Oversize)	32A	695759	Screw (Connecting Rod)	60	490652	Grip-Starter Rope
26	791969	Ring Set (Standard) (Used After Code Date 05093000). ----- Note ----- 499631 Ring Set (Standard) (Used Before Code Date 05100100). 791324 Ring Set (.020" Oversize) (Used After Code Date 05093000). 692786 Ring Set (.020" Oversize) (Used Before Code Date 05100100).	33	499642	Valve-Exhaust	65	699228	Screw (Rewind Starter)
27	691866	Lock-Piston Pin	34	499641	Valve-Intake	78	699205	Screw (Flywheel Guard)
28	499423	Pin-Piston	35	691304	Spring-Valve (Intake)	82	807421	Screw (Gear Reduction Case)
29	690124	Rod-Connecting (Used Before Code Date 07081600). ----- Note ----- 792247 Rod- Connecting (.020" Undersize)	36	691304	Spring-Valve (Exhaust)	86	790332	Cover-Gear
29B	795636	Rod-Connecting (Used After Code Date 07081500).	37	699661	Guard-Flywheel	88	790333	Gasket-Gear Reduction Cover
			38	698557	Screw (Shut Off Valve)	95A	698544	Screw (Throttle Valve)
			40	692194	Retainer-Valve	97A	698542	Shaft-Throttle
			45	690977	Tappet-Valve	98B	698551	Kit-Idle Speed
			46A	696813	Camshaft ----- Note ----- 793703 Camshaft Used on Type No(s). 0134, 0168.	104A	698536	Pin-Float Hinge
			50	793419	Manifold-Intake	105	698537	Valve-Float Needle
			51★◆∅	692555	Gasket-Intake	108C	698546	Valve-Choke
			53	793414	Stud (Carburetor)	117A	698666	Jet-Main (Standard) ----- Note ----- 793415 Jet-Main (Standard) Used on Type No(s). 0159, 0162, 0176, 0180, 0181.
			55	691422	Housing-Rewind Starter (Rewind Starter Parts Used With 3MM Diameter Starter Rope) ----- Note ----- 791848 Housing- Rewind Starter (Rewind Starter Parts Used With 5MM Diameter Starter Rope)	117B	793708	Jet-Main (Standard)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

122400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
118A	698552	Jet–Main (High Altitude) ----- Note ----- 793416 Jet–Main (High Altitude) Used on Type No(s). 0159, 0162, 0176, 0180, 0181.	146	690979	Key–Timing ----- Note ----- 790943 Key–Timing Used on Type No(s). 0111, 0121, 0126, 0130, 0134, 0154, 0181, 0190, 0201, 0229, 0232, 0235.	187	791745	Line–Fuel (Cut to Required Length)
118B	793709	Jet–Main (High Altitude)	155	★698214	Plate–Cylinder Head	187B	791874	Line–Fuel (Molded)
121B	698567	Kit–Carburetor Overhaul	161	699207	Base–Air Cleaner (Metal) (Flat Panel Air Cleaner)	188	699479	Screw (Control Bracket)
122	★693749	Spacer–Carburetor	163B	★◆696024	Gasket–Air Cleaner (Flat Panel Air Cleaner)	190	699220	Screw (Fuel Tank)
122A	695286	Spacer–Carburetor Used on Type No(s). 0210.	163D	793412	Gasket–Air Cleaner (Oil Bath Air Cleaner)	190B	795047	Screw (Fuel Tank) (Used After Code Date 08051100). ----- Note ----- 699839 Screw (Fuel Tank) (Used Before Code Date 08051200).
125A	698558	Carburetor ----- Note ----- 793411 Carburetor Used on Type No(s). 0159, 0162, 0176, 0180, 0181. 793711 Carburetor Used on Type No(s). 0160, 0229, 0232.	170	699818	Stud (Crankcase Cover)	192	694543	Adjuster–Rocker Arm
125B	793707	Carburetor (Not Serviced Separately, Order Replacement Carburetor) Used on Type No(s). 0134, 0168.	176	793441	Seal–O Ring (Air Cleaner Base)	209	692571	Spring–Governor ----- Note ----- 693206 Spring– Governor Used on Type No(s). 0033, 0119, 0122, 0128, 0129, 0132, 0160, 0169, 0195, 0197, 0199, 0229, 0232. 693710 Spring– Governor Used on Type No(s). 0150.
127C	◆690727	Plug–Welch	180	795832	Tank–Fuel (Metal) (Used After Code Date 08051100). ----- Note ----- 794640 Tank–Fuel (Metal) (Used After Code Date 07050800 and Before Code Date 08051200). 791598 Tank–Fuel (Metal) (Used Before Code Date 07050900).	209A	691278	Spring–Governor
130B	698543	Valve–Throttle	181	794641	Cap–Fuel Tank (Metal) (Used After Code Date 07050800). ----- Note ----- 699840 Cap–Fuel Tank (Metal) (Used Before Code Date 07050900).	211	692069	Spring–Governor Idle
133A	698539	Float–Carburetor				219	693578	Gear–Governor
137A	◆698538	Gasket–Float Bowl				220	691724	Washer (Governor Gear)
141	698545	Kit–Choke Shaft ----- Note ----- 793413 Kit–Choke Shaft Used on Type No(s). 0159, 0162, 0176, 0180, 0181. 793710 Kit–Choke Shaft Used on Type No(s). 0160, 0229, 0232.						

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

⊘ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	
222	699589	Bracket-Control (Used Before Code Date 07030100).	227	692573	Lever-Governor Control	306	693610	Shield-Cylinder	
222C	699493	Bracket-Control (Used Before Code Date 07030100).	231	690718	Screw (Choke Valve)	307	699483	Screw (Cylinder Shield)	
222D	795669	Bracket-Control (Used With Metal Fuel Tank) (Used After Code Date 08051100). ----- Note ----- 793107 Bracket-Control (Used With Metal Fuel Tank) (Used After Code Date 07022800 and Before Code Date 08051200). 793107 Bracket-Control (Used With Plastic Fuel Tank) (Used After Code Date 08051100).	238	691300	Valve-Cap	309	694504	Motor-Starter	
222F	795668	Bracket-Control (Used With Metal Fuel Tank) (Used After Code Date 08051100). ----- Note ----- 793100 Bracket-Control (Used With Metal Fuel Tank) (Used After Code Date 07022800 and Before Code Date 08051200). 793100 Bracket-Control (Used With Plastic Fuel Tank) (Used After Code Date 08051100).	240	298090S	Filter-Fuel	310	690323	Screw (Starter Motor)	
			265	691024	Clamp-Casing	311	497608	Brush Set	
			267	699492	Screw (Casing Clamp)	318B	790537	Screw (Mounting Bracket)	
			268	691025	Casing-Control Wire (Cut to Required Length)	332	792723	Nut (Flywheel)	
			269	691026	Wire-Control (Cut to Required Length)	333	695711	Armature-Magneto	
			270	691027	Nut (Control Wire Casing)	334	699477	Screw (Magneto Armature)	
			271	691028	Lever-Control	337	491055S	Plug-Spark (Resistor) ----- Note ----- 691043 Plug-Spark (EMS)	
			271A	694256	Lever-Control	347	698338	Switch-Rocker ----- Note ----- 697854 Switch-Rocket Used on Type No(s). 0033, 0100, 0110, 0112, 0114, 0118, 0119, 0122, 0123, 0125, 0136, 0146, 0150, 0154, 0157, 0162, 0167, 0170, 0178, 0190, 0182, 0187, 0188, 0195, 0196, 0205, 0211, 0226. 790949 Switch-Rocket Used on Type No(s). 0201.	
			276A	698540	Washer-Sealing				
			281	793133	Panel-Control (Used After Code Date 07022800). ----- Note ----- 790261 Panel-Control (Used Before Code Date 07030100). 793122 Panel-Control Used on Type No(s). 0136, 0150, 0197, 0199, 0200. 793133 Panel-Control Used on Type No(s). 0121, 0156, 0163, 0201, 0229, 0232.				
			286	698611	Module-Oil Sensor	356	693651	Wire-Stop	
			287	699629	Screw (Dipstick Tube)	356A	692390	Wire-Stop	
			300A	699231	Muffler	356B	692602	Wire-Stop	
			300E	791595	Muffler	356C	695630	Wire-Stop	
			304	699598	Housing-Blower	356F	697397	Wire-Stop	
			305	699480	Screw (Blower Housing)	356K	791765	Wire-Stop	
						356M	792609	Wire-Stop	
						357	692191	Key-Drive Pulley	

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

122400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
358	791797	Gasket Set–Engine	501	698315	Regulator	597	691696	Screw (Pawl Friction Plate)
363	19203	Puller–Flywheel			----- Note -----	601	791850	Clamp–Hose
364	695693	Terminal–Oil Plug		691185	Regulator	604	697326	Cover–Control
365	699484	Screw (Carburetor)			Used on Type No(s). 0229, 0232.	608	693394	Starter–Rewind (Rewind Starter Parts Used With 3MM Diameter Starter Rope)
383	19374S	Wrench–Spark Plug	503	691532	Strap–Starter			----- Note -----
412	793443	Nut (Air Cleaner Cover)	504	694254	Washer Set–Friction			791670 Starter– Rewind (Rewind Starter Parts Used With 5MM Diameter Starter Rope)
415	693463	Plug	505	691251	Nut (Governor Control Lever)			
425	699208	Screw (Air Cleaner Cover)	510	499308	Drive–Starter			
427	694255	Nut (Control Bracket)	513	692024	Drive–Clutch			
436	793706	Manifold–Exhaust	522	697689	Plug–Dipstick/Fill			
437	791972	Screw (Exhaust Manifold)	523	693618	Dipstick			
445	491588S	Filter–Air Cleaner Cartridge (Flat Panel)	524	281370S	Seal–Dipstick Tube			
455	692591	Cup–Flywheel	526	690297	Screw (Regulator)	613	699209	Screw (Muffler)
456	692299	Plate–Pawl Friction	526A	690326	Screw (Regulator)	613A	699480	Screw (Muffler)
459	281505S	Pawl–Ratchet	535	696263	Filter–Air Cleaner Foam	613B	697812	Screw (Muffler)
464	◆698550	Seal–O Ring (Fuel Shut Off Valve)	535A	792472	Filter–Air Cleaner Foam	615	692576	Retainer–Governor Shaft
474	695730	Alternator	544	692966	Armature–Starter	616	692547	Crank–Governor
		----- Note -----	549	793434	Washer (Air Cleaner Cover)	617	793440	Seal–O Ring (Intake Manifold)
		793640 Alternator Used on Type No(s). 0150.	552	692346	Bushing–Governor Crank	619	699480	Screw (Cylinder Head Plate)
		695466 Alternator Used on Type No(s). 0229, 0232.	562	691119	Bolt (Governor Control Lever)	621	692310	Switch–Stop
474A	698314	Alternator	564	699491	Screw (Control Cover)	627	792608	Bracket–Stopswitch
493	691177	Bracket–Mounting	564A	699206	Screw (Control Cover)	632	693408	Spring/Link– Mechanical Governor
493C	699048	Bracket–Mounting	577	690795	Cable–Starter	633B	◆690998	Seal–Choke/Throttle Shaft
497	691693	Screw (Stop Switch Bracket)	578B	790948	Wire Assembly	635	692076	Boot–Spark Plug
500A	792613	Washer (Key Switch)	579	691029	Nut (Starter Cable)	635A	692927	Boot–Spark Plug
						643	696264	Retainer–Air Filter
						643A	793424	Retainer–Air Filter

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

∅ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3379–12

Assemblies include all parts shown in frames.

06/16/2008

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
652	699755	Screw (Support Bracket)	830	694544	Stud-Rocker Arm	968	692584	Cover-Air Cleaner (Flat Panel)
652A	699480	Screw (Support Bracket)	832A	697818	Guard-Muffler			----- Note -----
663	699206	Screw (Control Panel)	832D	791600	Guard-Muffler			698811 Cover-Air Cleaner (Flat Panel)
668	694257	Spacer	836B	699209	Screw (Muffler Guard)			Used on Type No(s). 0033, 0118, 0119, 0132, 0134, 0160, 0168, 0173, 0174, 0205, 0211, 0229, 0232.
675	691261	Washer (Brush Retainer)	836C	699234	Screw (Muffler Guard)	968C	793425	Cover-Air Cleaner (Oil Bath Air Cleaner)
676	393760	Deflector-Muffler	836E	699755	Screw (Muffler Guard)	971	690370	Screw (Air Cleaner Base To Carburetor)
676A	697816	Deflector-Muffler	842	691031	Seal-O Ring (Dipstick Tube)	972	694260	Tank-Fuel Bowl-Float
677	699776	Screw (Muffler Deflector)	843A	695588	Sleeve-Lever	975A	698541	Gasket Set-Carburetor
677A	690661	Screw (Muffler Deflector)	847	693617	Dipstick/Tube Assembly	977B	698568	Seal-Throttle Shaft
689	691855	Spring-Friction	851	493880S	Terminal-Spark Plug	987	698556	Gasket-Cylinder Head Plate
692	690572	Spring-Detent	863	699229	Bracket-Muffler	990	695756	Key Set
697	790537	Screw (Starter Motor)	864	699232	Adapter-Muffler	1005	692592	Fan-Flywheel
718	690959	Pin-Locating	868	★692044	Seal-Valve	1005A	794273	Fan-Flywheel
725	792874	Shield-Heat	875B	793423	Base-Air Cleaner (Oil Bath Air Cleaner)	1019	694852	Kit-Label
727	698039	Cover-Starter Drive	883	★691893	Gasket-Exhaust	1022	★691890	Gasket-Rocker Cover
728	699632	Screw (Heat Shield)	883A	★692237	Gasket-Exhaust	1023	791585	Cover-Rocker Arm
732	699200	Screw (Starter Drive Cover)	890	790203	Bracket-Support	1026	790287	Rod-Push
741	695087	Gear-Timing	892	791944	Switch-Key	1029	691230	Arm-Rocker
742	692564	Retainer-E Ring	914	699480	Screw (Rocker Cover) (Bottom)	1034	691343	Guide-Push Rod Label-Emissions (Available From An Authorized Briggs & Stratton Sevice Dealer)
746	790278	Gear-Idler	914A	692557	Screw (Rocker Cover) (Top)	1051	691265	Ring-Retaining
773	694258	Retainer	914B	697551	Screw (Rocker Cover) (Center)	1052	790141	Sensor-Oil
783	692353	Gear-Pinion	920	691656	SAolenoid-Starter	1054	280275	Cable-Tie
797	691029	Nut (Brush Retainer)	957	792647	Cap-Fuel Tank			
799	699202	Screw (Oil Sensor)	957A	698109	Cap-Fuel Tank			
801	694482	Cap-Drive	958	698549	Valve-Fuel Shut Off (Plastic)			
802	691286	Cap-End	967	493537S	Filter-Pre Cleaner (Flat Panel)			
803	693757	Housing-Starter						
813	690635	Clamp						
819	699233	Screw (Muffler Bracket)						
823	699209	Screw (Muffler Adapter)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

122400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1058	277040	Operator's Manual ----- Note ----- 276339 Operator's Manual (Oil Bath Air Cleaner)	1211	498144	Pulley/Spring Assembly (Spring) (Rewind Starter Parts Used With 3MM Diameter Starter Rope)	1319	794467	Label-Warning
1070	699201	Screw (Flywheel Fan)				1330	272147	Repair Manual
1090	691293	Retainer-Brush				1345	699887	Filter-Filler Neck
1095	791798	Gasket Set-Valve				1345A	792917	Filter-Filler Neck
1119	699772	Screw (Alternator)				1363	790334	Sprocket-Gear Reduction
1130	793438	Stud (Intake Manifold)				1364	790335	Chain-Gear Reduction
1174	692055	Nut (Intake Manifold)				1365	790336	Shaft-Output Gear Reduction
1210	498144	Pulley/Spring Assembly (Pulley) (Rewind Starter Parts Used With 3MM Diameter Starter Rope) ----- Note ----- 791849 Pulley/Spring Assembly (Pulley) (Rewind Starter Parts Used With 5MM Diameter Starter Rope)	1305	699691	Screw (Oil Sensor Module)	1367	690936	Screw (Gear Reduction Sprocket)
						1368	690301	Washer (Gear Reduction Sprocket)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3379-14

Assemblies include all parts shown in frames.

06/16/2008