



Illustrated Parts List

Model Series

12K300

TYPE NUMBERS
0110 through 0153.

TABLE OF CONTENTS

Air Cleaner	5
Blower Housing	6
Camshaft	2
Carburetor	4
Controls	5
Crankcase Cover	2
Crankshaft	2
Cylinder	2
Cylinder Head	3
Exhaust System	5
Flywheel	6
Fuel Supply	4
Governor Spring	5
Ignition	5
Kits/Gaskets - Carburetor	4
Kits/Gaskets - Engine	2
Kits/Gaskets - Valve	3
Lubrication	2
Piston Group	2
Rewind Starter	6



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

12K300










1319 WARNING LABEL

REQUIRED when replacing parts with warning labels affixed.





1058 OPERATOR'S MANUAL





1330 REPAIR MANUAL

1019 LABEL KIT



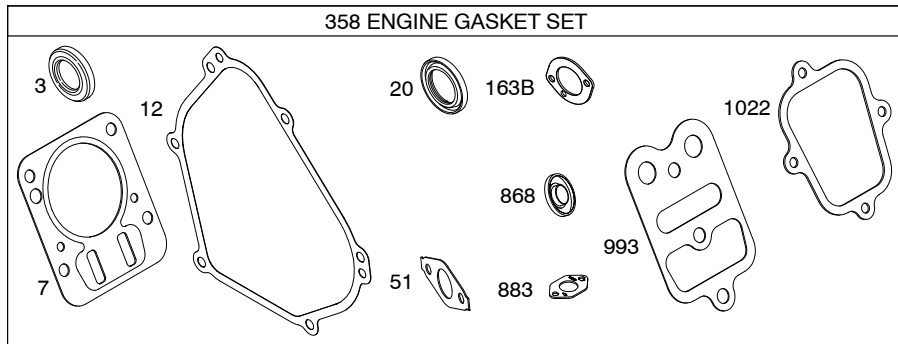
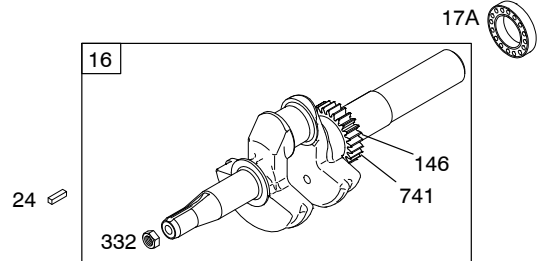

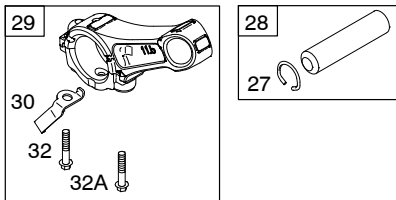
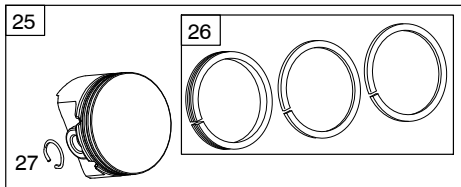
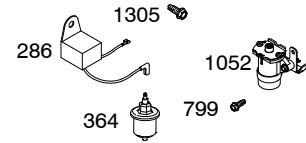
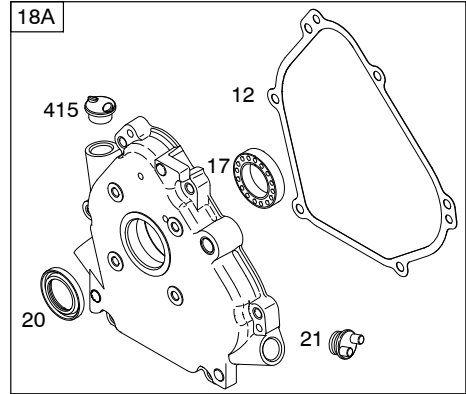
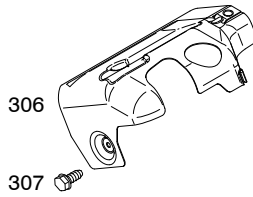
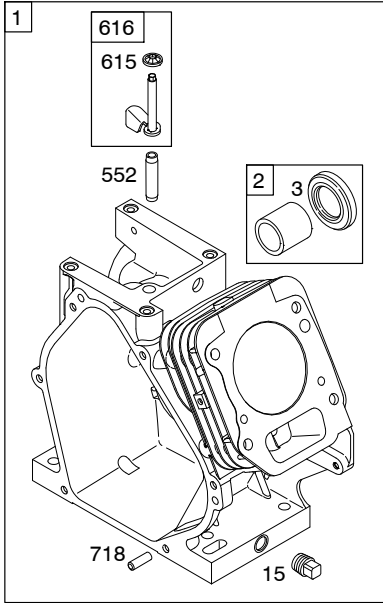


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 6145-2 Assemblies include all parts shown in frames. 08/07/2008

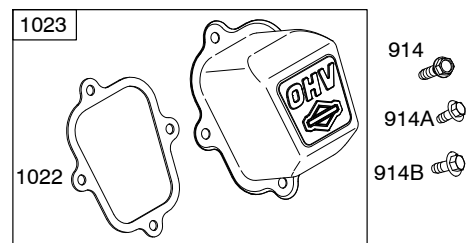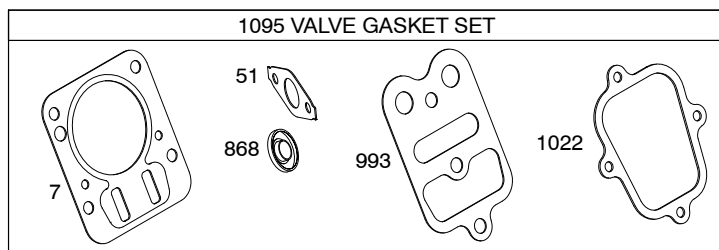
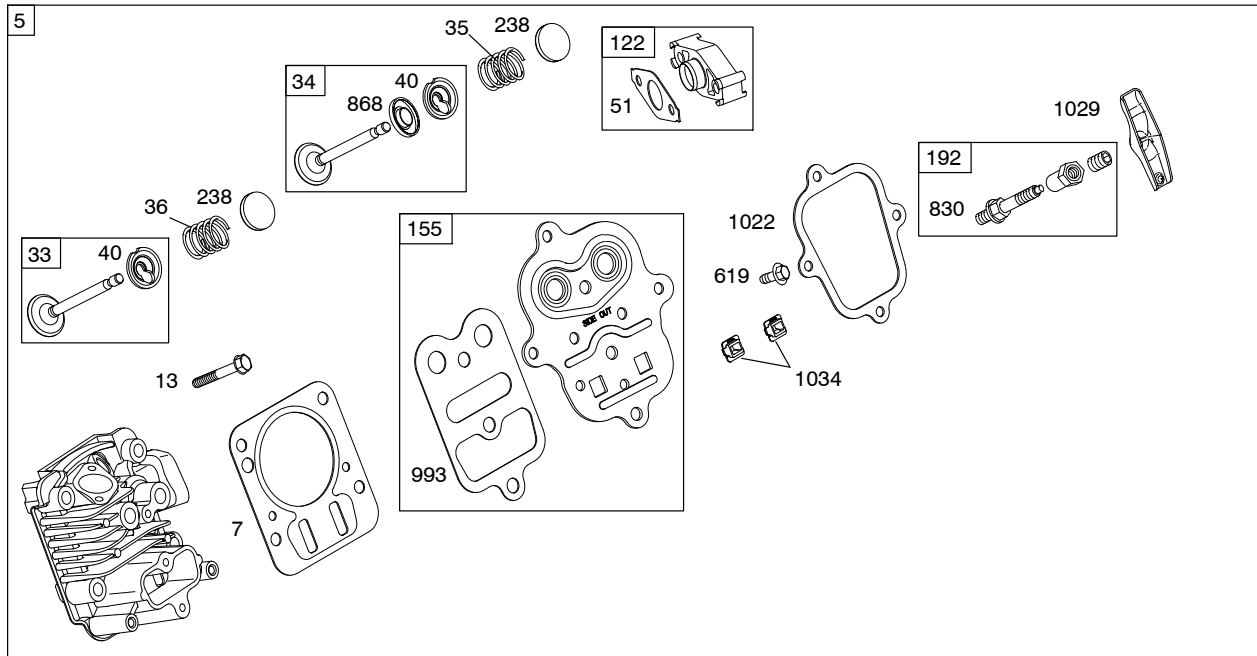
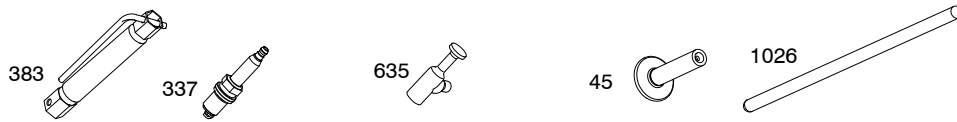


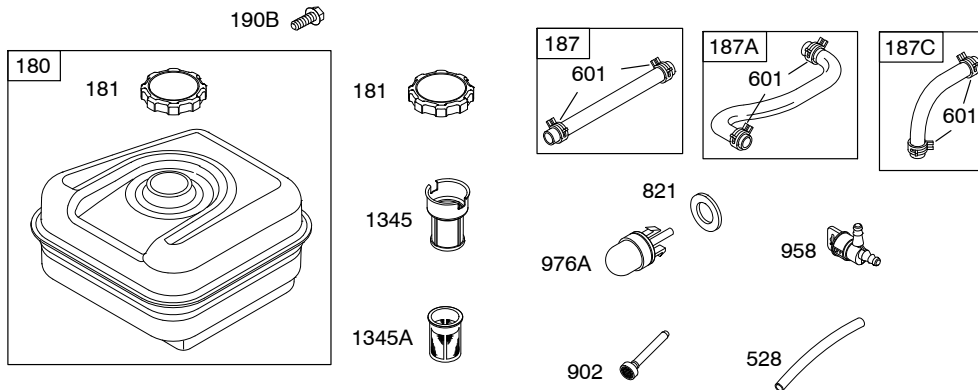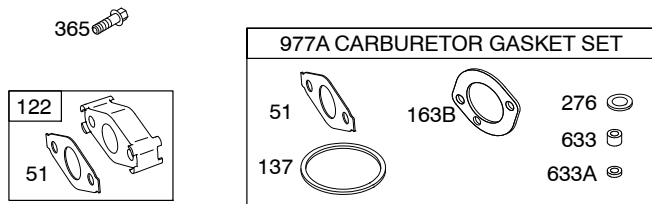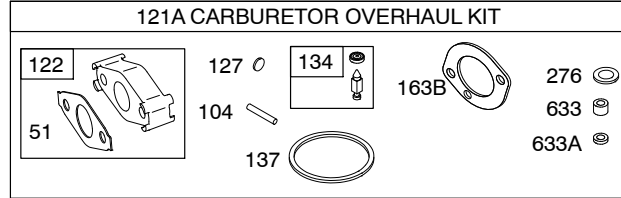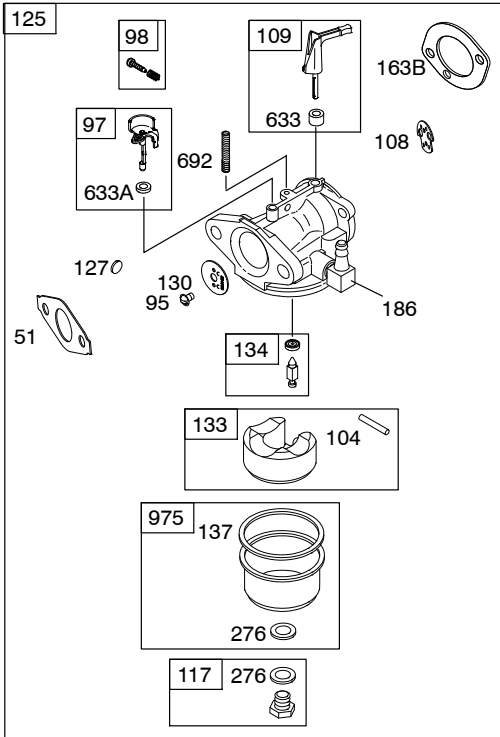

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
6145-4 Assemblies include all parts shown in frames. **08/07/2008**

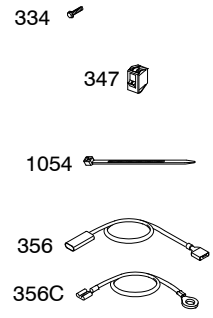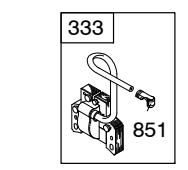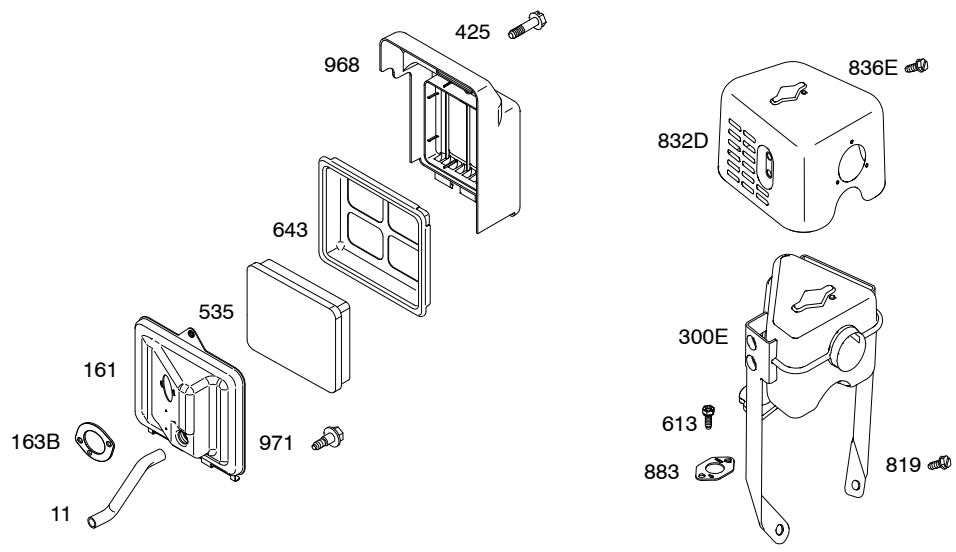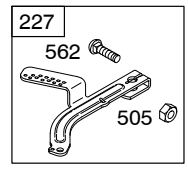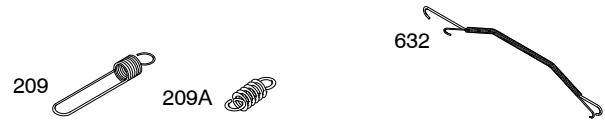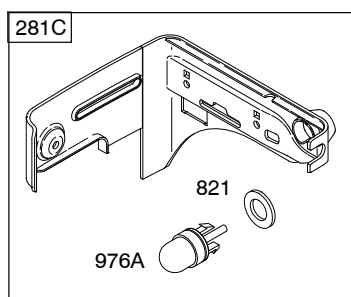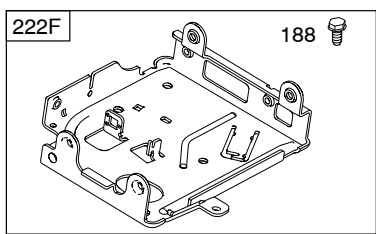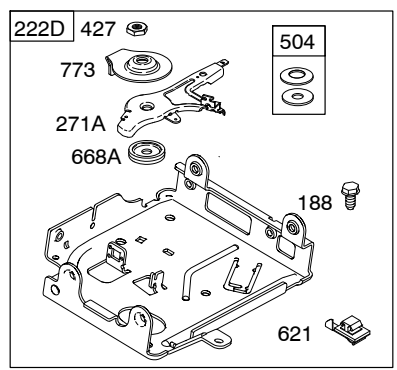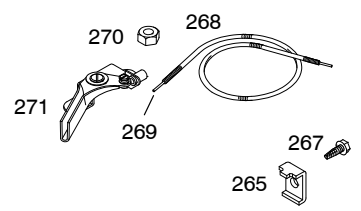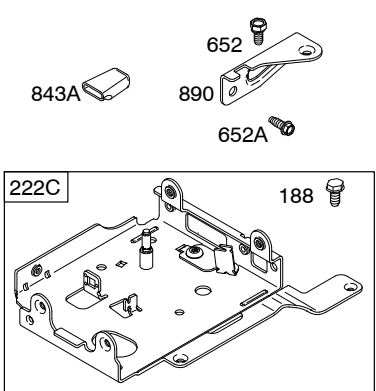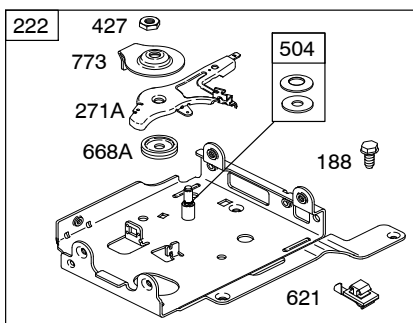

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
6145-5 Assemblies include all parts shown in frames. **08/07/2008**

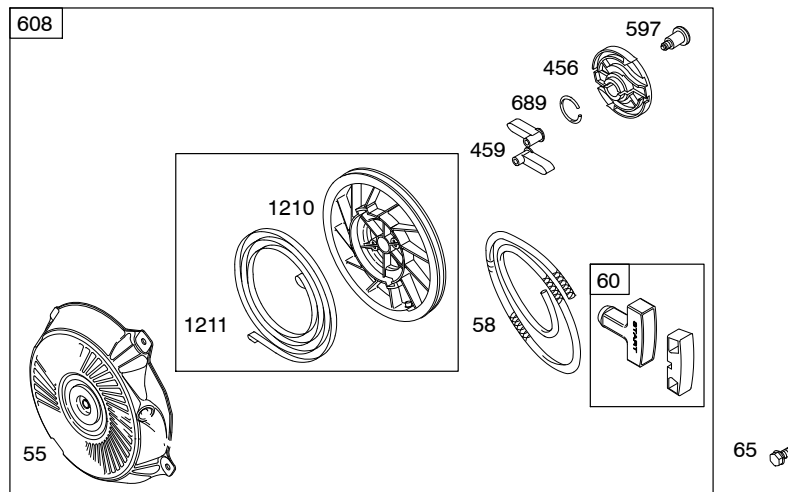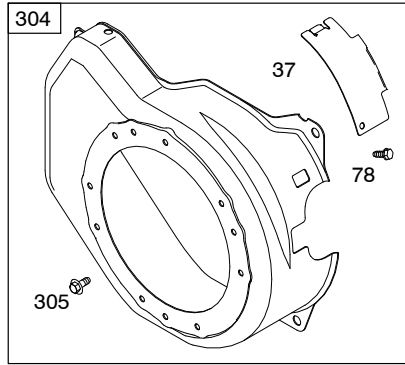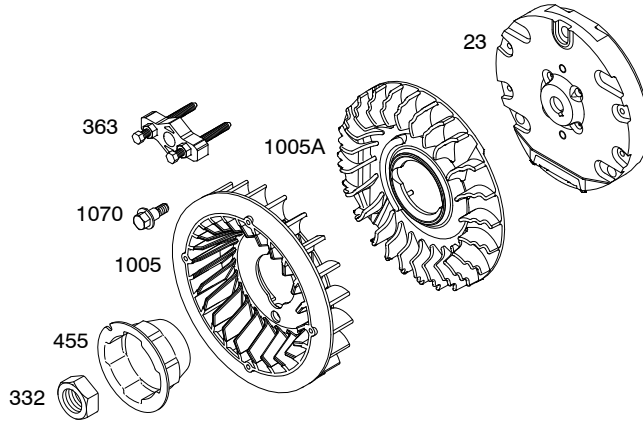

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
6145-6 Assemblies include all parts shown in frames. 08/07/2008

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION		
1	699490	Cylinder Assembly	26	791969	Ring Set (Standard)	104	●691242	Pin-Float Hinge		
2	399269	Kit-Bushing/Seal (Magneto Side)			----- Note -----	108	692567	Valve-Choke		
3	★299819S	Seal-Oil (Magneto Side)			791234	Ring Set (.020" Oversize)	109	690023	Valve-Choke	
5	699486	Head-Cylinder	27	691866	Lock-Piston Pin	117	790570	Jet-Main (Standard)		
7	★∅698210	Gasket-Cylinder Head	28	499423	Pin-Piston	121A	792006	Kit-Carburetor Overhaul		
11	692600	Tube-Breather (Flat Panel Air Cleaner)	29	690124	Rod-Connecting	122	★●693749	Spacer-Carburetor		
12	★699485	Gasket-Crankcase	30	791584	Dipper-Connecting Rod	125	790569	Carburetor		
13	699482	Screw (Cylinder Head)	32	691664	Screw (Connecting Rod)	127	●691739	Plug-Welch		
15	691686	Plug-Oil Drain (Square Head)	32A	695759	Screw (Connecting Rod)	130	691181	Valve-Throttle		
15A	691682	Plug-Oil Drain (Flush)	33	499642	Valve-Exhaust	133	398187	Float-Carburetor		
16	790568	Crankshaft Used on Type No(s). 0153. ----- Note ----- 792915 Crankshaft Used on Type No(s). 0110.	34	499641	Valve-Intake	134	●398188	Kit-Needle/Seat		
17	692517	Bearing-Ball	35	691304	Spring-Valve (Intake)	137	●●693981	Gasket-Float Bowl		
17A	690824	Bearing-Ball	36	691304	Spring-Valve (Exhaust)	146	690979	Key-Timing		
18A	699672	Cover-Crankcase	37	699661	Guard-Flywheel	155	★698214	Plate-Cylinder Head		
20	★692550	Seal-Oil (PTO Side)	40	692194	Retainer-Valve	161	699207	Base-Air Cleaner (Metal) (Flat Panel Air Cleaner)		
21	281658S	Cap-Oil Fill	45	690977	Tappet-Valve	163B	★●●696024	Gasket-Air Cleaner (Flat Panel Air Cleaner)		
22	699478	Screw (Crankcase Cover/ Sump)	46A	696813	Camshaft	180	794640	Tank-Fuel (Metal) (Used After Code Date 07050800). ----- Note -----		
23	699488	Flywheel	51	★●●∅692555	Gasket-Intake (2 Required)			791598 Tank-Fuel (Metal) (Used Before Code Date 07050900).		
24	222698S	Key-Flywheel	55	791848	Housing-Rewind Starter			181	794641	Cap-Fuel Tank (Metal) (Used After Code Date 07050800). ----- Note -----
25	792004	Piston Assembly (Standard) ----- Note ----- 791325 Piston Assembly (.020" Oversize)	58	66574	Rope-Starter (Cut to Required Length)			699840 Cap-Fuel Tank (Metal) (Used Before Code Date 07050900).		
			60	490652	Grip-Starter Rope (2 Piece)					
			65	699228	Screw (Rewind Starter)					
			78	699205	Screw (Flywheel Guard)					
			95	691636	Screw (Throttle Valve)					
			97	690024	Shaft-Throttle					
			98	398185	Kit-Idle Speed (Carburetor)					

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

12K300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
186	692317	Connector-Hose	227	692573	Lever-Governor Control	427	694255	Nut (Control Bracket)
187	791766	Line-Fuel (Cut to Required Length)	238	691300	Valve-Cap	504	694254	Washer Set-Friction (Control Bracket)
187A	791867	Line-Fuel (Molded)	265	691024	Clamp-Casing	455	692591	Cup-Flywheel
187C	791866	Line-Fuel (Molded)	267	699492	Screw (Casing Clamp)	456	692299	Plate-Pawl Friction
188	699479	Screw (Control Bracket)	268	691025	Casing-Control Wire (Cut to Required Length)	459	281505S	Pawl-Ratchet
190B	795047	Screw (Fuel Tank) (Used After Code Date 08051100).	269	691026	Wire-Control (Cut to Required Length)	505	691251	Nut (Governor Control Lever)
		----- Note -----	270	691027	Nut (Control Wire Casing)	528	692792	Hose-Primer
		699839 Screw (Fuel Tank) (Used Before Code Date 08051200).	271	691028	Lever-Control	535	696263	Filter-Air Cleaner Foam
192	694543	Adjuster-Rocker Arm	271A	694256	Lever-Control	552	692346	Bushing-Governor Crank
209	692571	Spring-Governor	276	●271716	Washer-Sealing	562	691119	Bolt (Governor Control Lever)
209A	691278	Spring-Governor	281C	792920	Panel-Control	597	691696	Screw (Pawl Friction Plate)
219	693578	Gear-Governor	286	698611	Module-Oil Sensor	601	791850	Clamp-Hose
220	691724	Washer (Governor Gear)	300E	791595	Muffler	608	791670	Starter-Rewind
222	699589	Bracket-Control (Used Before Code Date 07030100). Used on Type No(s). 0110.	304	699598	Housing-Blower	613	699209	Screw (Muffler)
222C	699493	Bracket-Control (Used Before Code Date 07030100). Used on Type No(s). 0153.	305	699480	Screw (Blower Housing)	615	692576	Retainer-Governor Shaft
222D	793107	Bracket-Control (Used After Code Date 07022800). Used on Type No(s). 0110.	306	693610	Shield-Cylinder	616	692547	Crank-Governor
222F	793100	Bracket-Control (Used After Code Date 07022800). Used on Type No(s). 0153.	307	699483	Screw (Cylinder Shield)	619	699480	Screw (Cylinder Head Plate)
			332	792723	Nut (Flywheel)	621	692310	Switch-Stop
			333	695711	Armature-Magneto	632	693408	Spring/Link-Mechanical Governor
			334	699477	Screw (Magneto Armature)	633	●693867	Seal-Choke/Throttle Shaft
			337	491055S	Plug-Spark	633A	●691321	Seal-Choke/Throttle Shaft
			347	698338	Switch-Rocker	635	692927	Boot-Spark Plug
			356	692602	Wire-Stop	643	696264	Retainer-Air Filter
			356C	695630	Wire-Stop	652	699755	Screw (Support Bracket)
			358	791797	Gasket Set-Engine	652A	699230	Screw (Support Bracket)
			363	19203	Puller-Flywheel			
			364	695693	Terminal-Oil Plug			
			365	699484	Screw (Carburetor)			
			383	19374S	Wrench-Spark Plug			
			415	693463	Plug			
			425	699208	Screw (Air Cleaner Cover)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
663	699206	Screw (Control Panel)	843A	695588	Sleeve-Lever	1005	692592	Fan-Flywheel
668A	694257	Spacer	851	493880S	Terminal-Spark Plug	1005A	794273	Fan-Flywheel
689	691855	Spring-Friction	868	★∅692044	Seal-Valve	1019	694852	Kit-Label
692	690572	Spring-Detent	883	★691893	Gasket-Exhaust	1022	★∅691890	Gasket-Rocker Cover
718	690959	Pin-Locating	890	790203	Bracket-Control	1023	791585	Cover-Rocker Arm
741	695087	Gear-Timing	902	692741	Filter-Primer	1026	693517	Rod-Push
742	692564	Retainer-E Ring	914	699480	Screw (Rocker Cover) (Bottom)	1029	691230	Arm-Rocker
746	790278	Gear-Idler	914A	692557	Screw (Rocker Cover) (Top)	1034	691343	Guide-Push Rod
773	694258	Retainer	914B	697551	Screw (Rocker Cover) (Center)	1052	790141	Sensor-Oil
799	699202	Screw (Oil Sensor)	958	698549	Valve-Fuel Shut Off (Plastic)	1054	280275	Cable-Tie
819	699233	Screw (Muffler Bracket)	968	698180	Cover-Air Cleaner (Flat Panel)	1058	276057	Operator's Manual
821	792919	Washer (Carburetor Primer)	971	690370	Screw (Air Cleaner Base To Carburetor)	1070	699201	Screw (Flywheel Fan)
830	694544	Stud-Rocker Arm (Muffler Guard)	975	493640	Bowl-Float	1095	791798	Gasket Set-Valve
832D	796240	Guard-Muffler (Used After Code Date 08062400). ----- Note ----- 791600 Guard- Muffler (Used Before Code Date 08062500).	976A	692666	Primer-Carburetor	1210	791849	Pulley/Spring Assembly (Pulley)
836E	699755	Screw (Muffler Guard)	977A	792007	Gasket Set-Carburetor	1211	791849	Pulley/Spring Assembly (Spring)
			993	∅694088	Gasket-Cylinder Head Plate	1305	699691	Screw (Oil Sensor Module)
						1319	794467	Label-Warning
						1330	272147	Repair Manual
						1345	699887	Filter-Filler Neck
						1345A	792917	Filter-Filler Neck

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

